



**Dash 18X Replacement Parts List**  
**Dash 18X Part Number 42651xxx**

Description	Part Number
AD PCB	42558001
AD PCB (IRIG)	42588001
DSP PCB	42557001
DVD/CD Writer	26514500
Slide switch	11679003
Fan assembly	26212300
Handle	24827000
Plate screen protector	32756101
System drive	31862603
Data Capture disk drive	31862500
Backplane PCB	42563001
Midplane PCB	42555001
SBC PCB w/video	13590210
Touch controller	26913000
Display	42448500*
Power supply (DC-AC Inverter)	26697100
Power supply (24V Switching)	26318320
Power monitor PCB	42594001
AC Power module	13949200
AC Power Cord	10787020
Ethernet cable	25245011

Printer connector guard	26497001
Thumb screws	13800200
Input mating connector	25460104
Stylus pen	13960100
Manual	22834521
Quick Start Guide	22834480
Rubber feet, large (4 per Dash 18)	12007001
Rubber feet, small (4 per Dash 18)	11220000
Extended Warranty (covers parts and labor for one year)	EW-D18
<b>SCR-18 Printer Option</b>	
Drive roll	24660100
Bearings	10531013
Pulley 10T	13337000
Pulley 27T	20393273
Belt	20391100
Motor assembly	22289001
Printhead	30995035
Printhead controller PCB	42573001
Anti-static brush	24972001
Paper (20 rolls per case)	42105000

*Parts for legacy products are subject to availability.*

Contact AstroNova for price and delivery information.  
F.O.B. Point: West Warwick, Rhode Island, USA  
Terms: Net 30 Days