

Dash 20HF-HS and Dash 20HF Replacement Parts List Dash 20HF-HS Part Number 42830120 Dash 20HF Part Number 42830020

NOTE: Most of the parts below are for all of the part numbers above. For parts that are unique, the part number of the Dash 20HF-HS or Dash 20HF is noted. If you need help determining which part number to use, please contact Technical Support (<a href="techneroriging-technical-techneroriging-technical-t

Description	Part Number
A / D Diffenential PCB (16 channels 35Vrms)	42812001
A / D (4 High Voltage Channels 250 Vrms)	42667002
Controller Board	42666101
SBC Board	13590611
Power Supply, 24V	26318200
Power Monitor Board	42656001
Display with touch controller	42448600
Touch Controller Board	26913100
Display - protective cover	32756200
Fan Assembly with harness (Qty of 2)	26212400
Harness - Keyboard / Mouse	14381200
Switch	11679003
Power cord	10787020
Ethernet Cable	25245011
Stylus Pen	13960100
OSM-20HF Operations Manual	22834539
Data Capture Drive (Part Number 42830020 only)	31862710
Data Capture Drive (Part Number 42830120 only)	26801020

System Drive (Part Number 42830020 only)	31862608
System Drive (Part Number 42830120 only)	26801240
DVD/CD RW Drive (Part Number 42830020 only)	26514500
Extended Warranty (covers parts and labor for one year)	EW-D20HF

Parts for legacy products are subject to availability.

Contact AstroNova for price and delivery information. F.O.B. Point: West Warwick, Rhode Island, USA Terms: Net 30 Days